


F-250/350 6.2L QUARTER TURN VALVE INSTALL

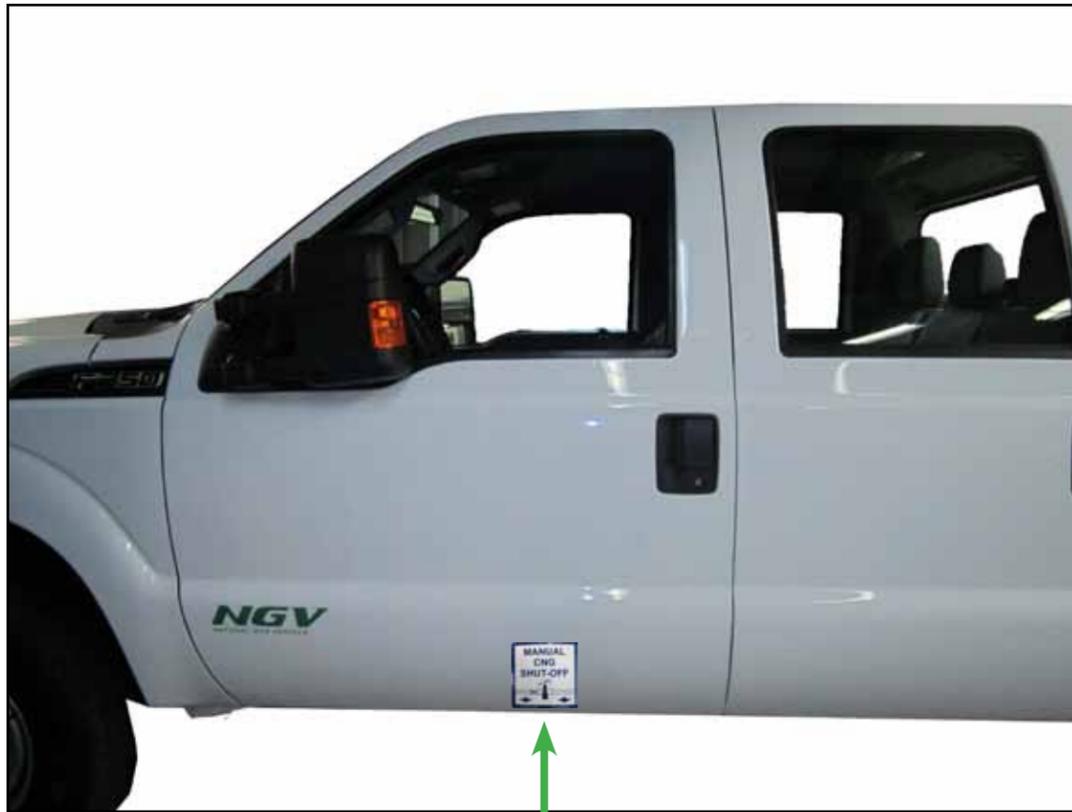

1. OEM stud will be used.
2. Remove OEM nut and save for reuse.



Valve Assembly



1. Install valve assembly. Secure with OEM nut and tighten to 45 ft-lbs.
2. Connect both hoses and torque to 30-35 ft-lbs.
3. Ensure "Manual CNG shut off" valve sticker is placed directly above the quarter turn valve on bottom of the driver side door.